


# ROD HOLDER


## Installation Instructions

Before using this product, carefully read this instruction manual for proper use. Keep this installation instructions in a safe place. If you are to give this product to a third person, provide him/her with this manual as well to ensure safe use.


IF2

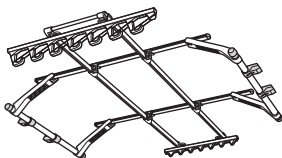


IF3

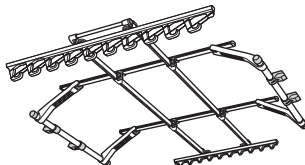


IF4

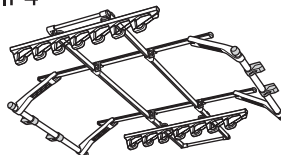


IF5

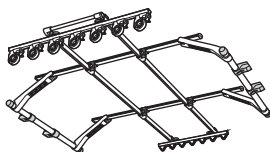

IF6

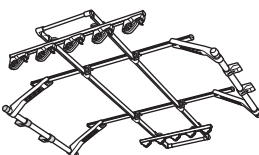


IF7/IF8

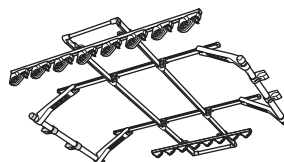

 **Warning** Failure to follow this warning can result in serious accidents including death or serious injury.

- Should a passenger's head contact the rod holder body or rods, the passenger should not sit in that seat.
- To load rods, remove tackle such as hooks and lures or use a commercial lure cover for safety.
- This product is a rod holder for loading rods inside the vehicle. Do not use this product for anything other than its intended purposes.












 **Precautions** Failure to follow precautions can result in injury, damage to the product, vehicle, or load.

- Do not leave rods loaded for extended periods of time. Rods may be damaged by direct sunlight or the internal temperature of the vehicle. Vibrations generated by the vehicle may result in damage or cause the rod or reel to malfunction.
- Rear viewing may be reduced depending on the vehicle model. Exercise caution when backing up the vehicle.
- Always fully tighten before and after driving.
- Maximum load capacity of the frame section: 15.4lbs or 7kg. (For safety, be sure not to exceed maximum load capacity.)

 **Note** Before using this product, the followings should be noted.

- Do not modify this product.

## Product contents

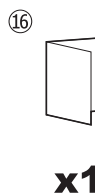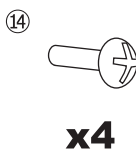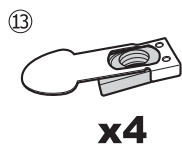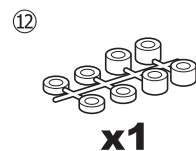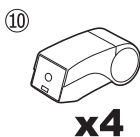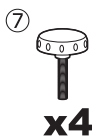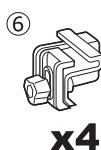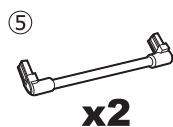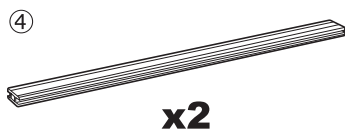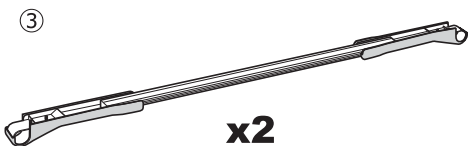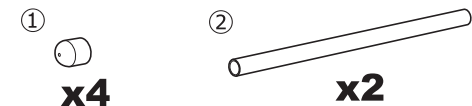    


## Common parts


No	Parts
①	Cap
②	Assist pipe
③	Horizontal bar
④	Frame bar
⑤	Frame pipe
⑥	Cross holder
⑦	Holder mounting knob
⑧	Countersunk screw
⑨	Hook
⑩	Stay
⑪	Spacer ①
⑫	Spacer ②·③ set
⑬	In-pull nut
⑭	Mounting screw (M6X30)
⑮	Flat Washer
⑯	Installation instructions

## Product contents

### IF2

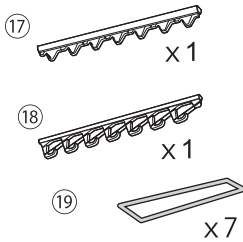

### IF3

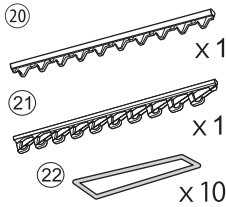


### IF2

17	Front Holder
18	Rear Holder
19	Rubber Band


### IF3

20	Front Holder
21	Rear Holder
22	Rubber Band

### IF4

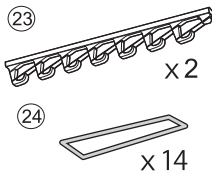

### IF5

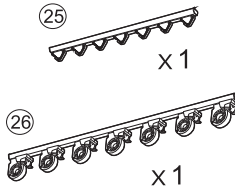


### IF4

23	Front / Rear Holder
24	Rubber Band


### IF5

25	Front Holder
26	Rear Holder

### IF6

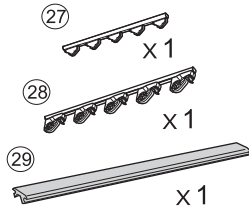

### IF7/IF8

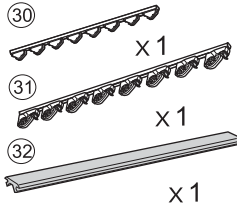

### IF6

27	Front Holder
28	Rear Holder
29	Frame Molding

### IF7/IF8

30	Front Holder
31	Rear Holder
32	Frame Molding

## Necessary Tools for Installation




Phillips screwdriver



Gloves



# 1 Assist Pipe Installation

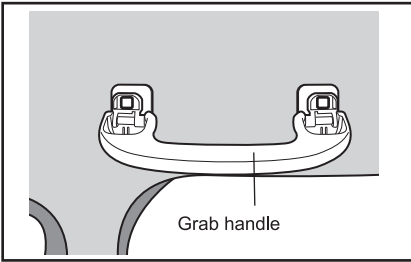


1. Remove the second or third seat grab handles.




Note

• If unable to remove the grab handle, please contact your dealer for removal instructions.

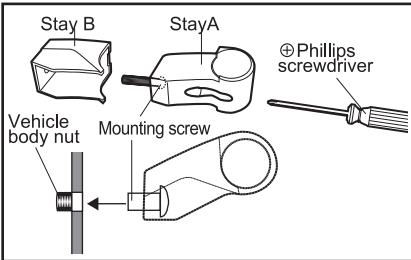


2-1 When the grab handle is a screw mounted type

Insert the mounting screw, which was removed in procedure ①, into Stay A, and put Stay A into Stay B. To temporarily hold the stay on to the vehicle body, insert the mounting screw into the nut, then tighten the mounting screw with Phillips screwdriver.

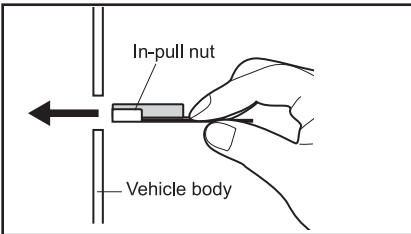


2-2 When the grab handle is a square hole mounted type


① Mount the included in-pull nut as shown in the figure.

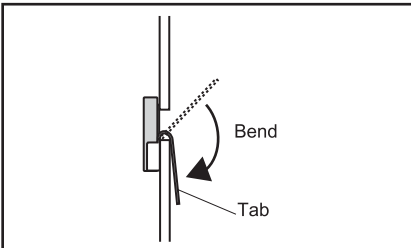



② Bend the tab as shown in the figure.

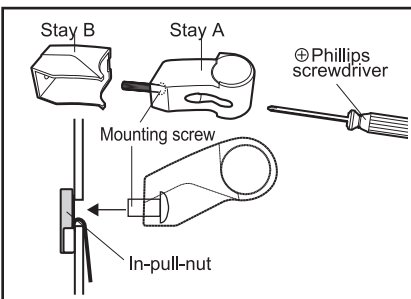

③ Insert the included mounting screw into Stay A, and put Stay A into Stay B. To temporarily hold the stay on to the vehicle body, insert the mounting screw into the in-pull nut, then tighten the mounting screw with Phillips screwdriver.

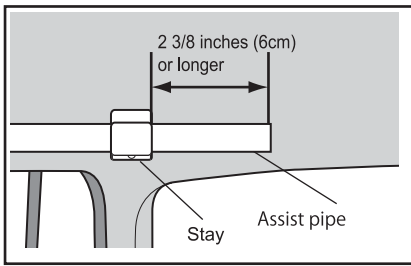

3. Put the assist pipe through the stay from the side and temporarily fix the stay with the pipe protruding at least 2 3/8 inches or 6cm. Temporarily tighten the mounting screw to prevent the pipe from rattling but allowing the pipe to slide backward and forward.

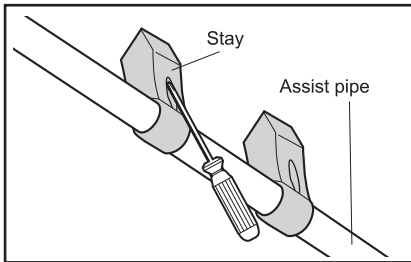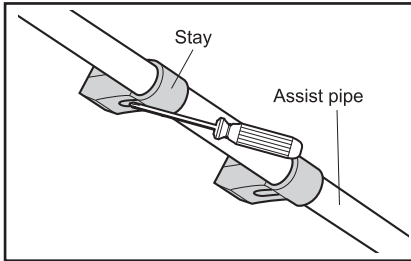


Note


- When the pipe touches the interior or when a hand cannot be inserted in the space between the headlining and the pipe due to lack of room, install the stay upside down or insert Spacer ① and tighten the screw.

Note

- When the bar is loose due to insufficient tightening with a long screw or when the horizontal bar length is insufficient due to a wide vehicle width, insert Spacer ① and tighten the screw. If the interior holes are too big and causing rattling, insert Spacer ② or ③ and tighten the screw.

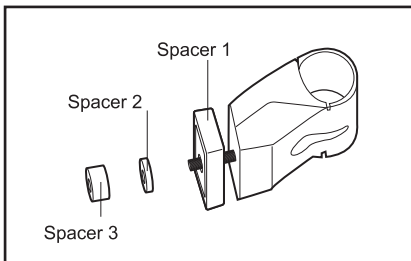


## 2 Horizontal Bar Installation


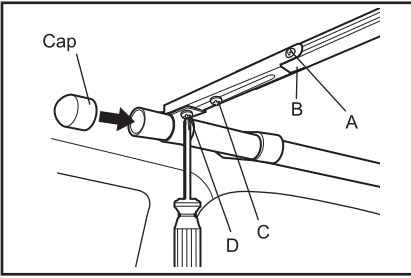


1. Loosen Screw A, B, C, and D on the horizontal bar, mount the horizontal bars at the front and rear parts of the assist pipe, and temporarily tighten Screw D.

2. Affix caps to the assist pipes.

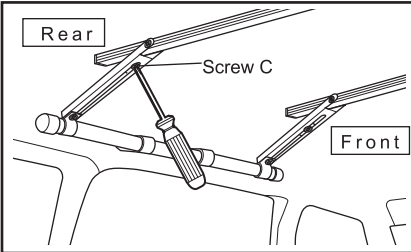


3. Raise the horizontal bars as high as possible. Make the adjuster contacts the bar so the horizontal bar becomes parallel with the roofline. Temporarily tighten Screw C.

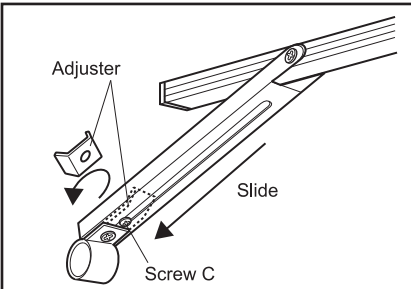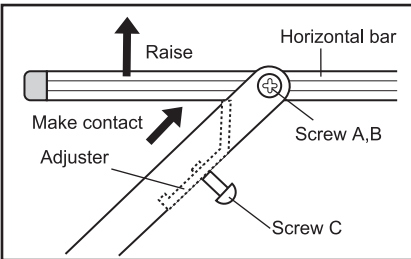

### Note

- If the adjuster does not fit under the horizontal bar, remove the adjuster, reverse the direction, and temporarily tighten Screw C.

### 3 Frame Assembly

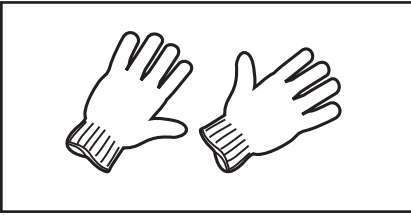


#### ⚠ Precautions

- Always wear gloves when assembling the rack. The aluminum edges may injure your hand or fingers.

1. Insert a frame bar into the 2 cross holders facing the same direction.

#### 👉 Note


- Hole direction differs between the left and right frame bars. Set the side with the wider hole to the outer side.

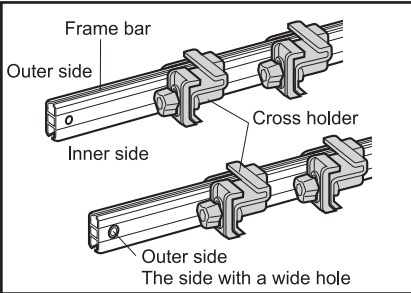

2. Face the cushion side of the frame pipe up, and attach it to the frame bar with a screw.



#### 👉 Note

- The plastic part is not threaded, but screw it vertically into the frame bar.

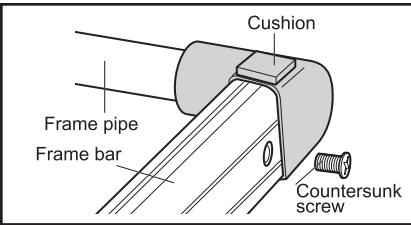

#### ⚠ Precautions


- When mounting the frame pipe to the frame bars, attach with screws after inserting the 2 frame pipes into the frame bars. The plastic parts on both ends of the frame pipe may be twisted or damaged while performing assembly if only one side is tightened.

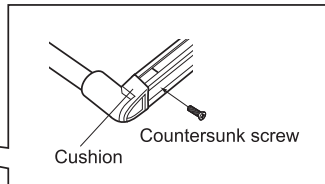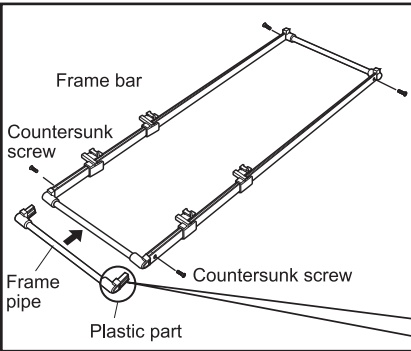

## 4 Holder Assembly


(※Preliminary work is not required for IF5.)

### Preliminary work (for IF2/IF3/IF4)

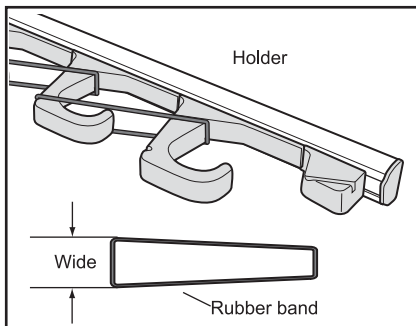

Attach rubber bands to the J hooks of the holder.



### Preliminary work (for IF6/IF7/IF8)

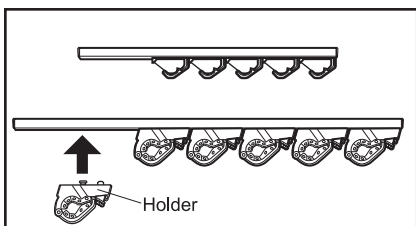

Decide on the number and position of holders based on the purpose.

#### Note


● To add a holder, purchase separately sold IF50 optional holder DH.

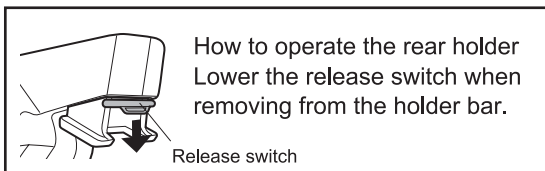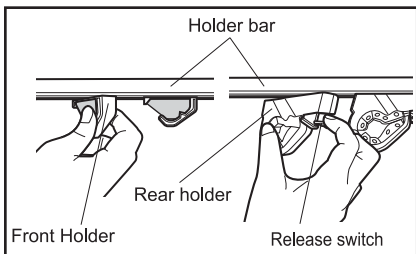

#### 【Removing holders】


Rotate the front holder by 90 degrees to remove from the holder bar.

Rotate the rear holder by 90 degrees while pressing the release switch to remove from the holder bar.

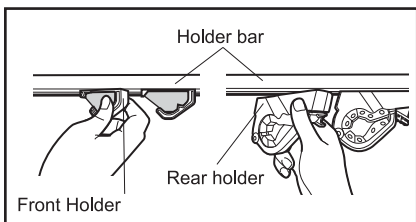

#### 【Mounting holders】

Insert the holder upper at a right angle into the space on the holder bar, and rotate it by 90 degrees to mount.

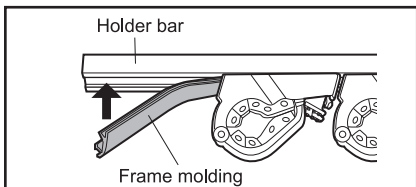


#### ⚠ Precautions


● Cut the frame molding with scissors and use it to fill any space on the holder bar.



## Fixation of Frame Bar and Holder


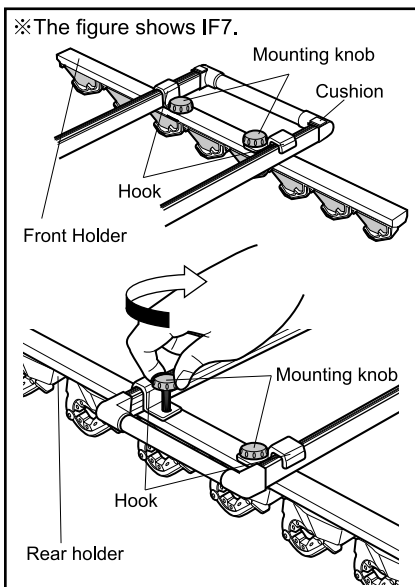


 Attach the front and rear holders to the frame bar using the hooks and the mounting knobs.

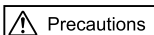

- Mount the holder below the cushion side of the frame bar.


## 5 Frame Installation

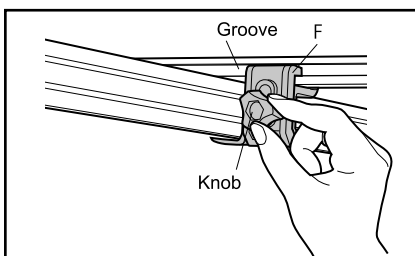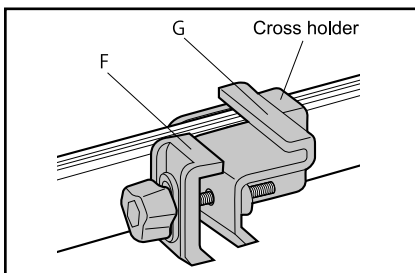


1. Loosen the cross holder knobs in 4 places, and slide F downward. Adjust the front and the rear of the cross holder, and insert G into the groove of the horizontal bar.

2. Lift F to insert the groove of the horizontal, and tighten the knob.

Section view of the horizontal bar

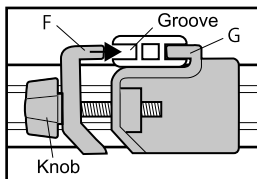

※The figure shows IF7.

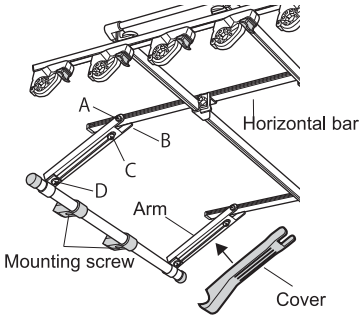

3. Adjust the height of the horizontal bar using the adjuster (see Page 4), and tighten screw A, B, C, and D and mounting screws.

**⚠ Precautions**

● Make sure that the fishing rod tips do not contact the roof air conditioner and also the handles do not contact the tailgate.


**👉 Note**

● If the front and rear holders need to be adjusted, loosen the hook to adjust.

4. Mount the cover to the arm.

## 6 Loading Rods

※The figure shows IF2.

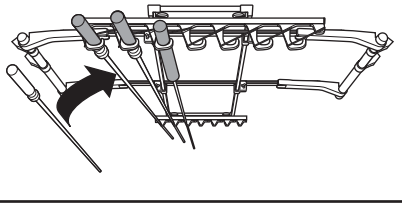

Load the rod front first and rear next.





**⚠ Precautions**

● Fishing rod tips are easily damaged, so handle the rod with care.

● Bundle rod sections with a rod belt, etc. to load jointed fishing rods to the IF4.

● Apply a cover to the telescopic extension rod end before loading to the IF4.

## 7 How to use the one-touch holder

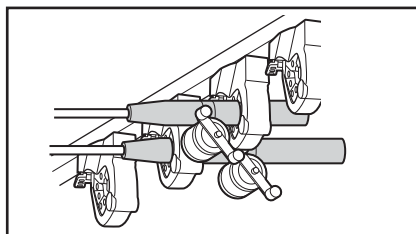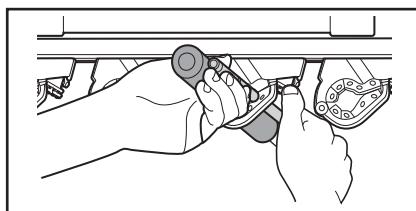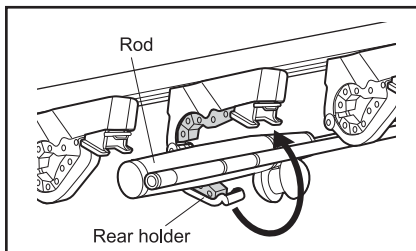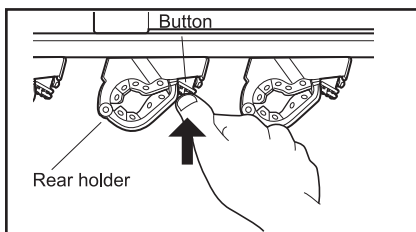


### How to load

- ① Press the button to open the rear holder.
- ② Place the rod end on the front holder.
- ③ Place the rod on the rear holder, and close the holder until a clicking sound is heard.

### Note

- Standard loading position is the tip side on the right and the grip side on the left.

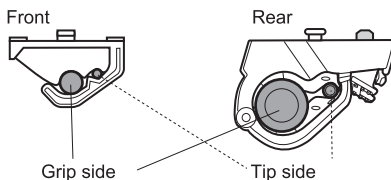

### How to unload rods

- ① Hold the rod grip end with a hand, and press the button with another hand to unload.



### Note

- When reels touch each other, load reels to the front and back of the rear holders alternately.

## 8 How to clean

- Wipe dirt off using a soft damp cloth and dry the product in the shade.
- Doing the following may cause discoloration or cracking of the product. Refrain from using them.
  - Use of detergents (especially alkali detergent) or wax
  - Use of solvents such as thinner
  - Oiling screws or bolts

## Repair parts

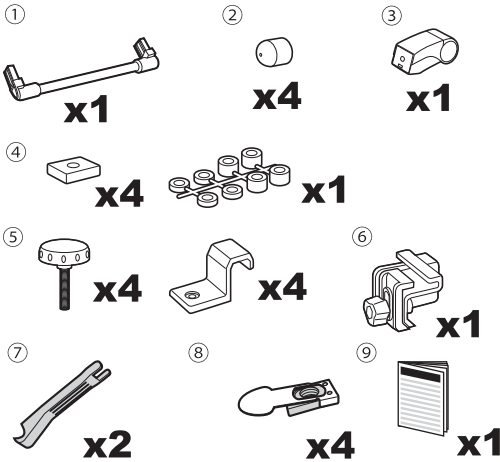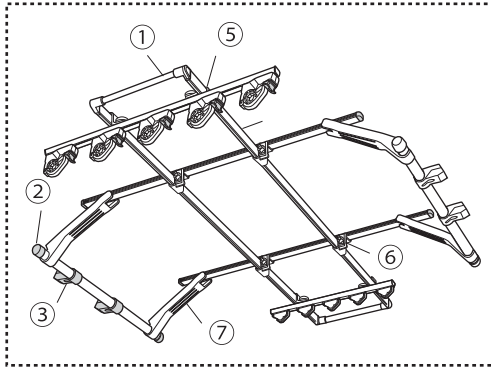

No	Product contents	
①	ZSP51	Frame pipe
②	ZSP55	Assist pipe cap
③	ZSP28	Stay
④	ZSP38	Spacer set
⑤	ZSP36	Holder hook set knob type
⑥	ZSP29	Cross holder
⑦	ZSP54	Cover
⑧	In-pull nut	
⑨	Installation instructions	

### Replacement Parts - Non Warranty

Compatible products	Product contents	
IF2 / IF3	ZSP32	Sponge set for the front holder A (5 pieces in a set)
IF2 / IF3 / IF4	ZSP24	Rubber band (5 pieces)
IF5	ZSP33	Sponge set for the front holder B (5 pieces in a set)
IF6 / IF7 / IF8	ZSP74	Sponge set for the front holder C (5 pieces in a set)

## Contact Information

We do not accept any liability for accidents, damage or injury caused by incorrect installation or use, modification, or natural disaster. Specifications and appearance of the carrier system and genuine replacement parts are subject to change without prior notice in the interest of product improvement.

### CAR MATE USA, Inc.

383 Van Ness Ave., Suite 1603  
Torrance, CA 90501 U.S.A.  
support@innoracks.com  
www.innoracks.com

### CARMATE MFG. CO.,LTD.

5-33-11, Nagasaki, Toshima-ku,  
Tokyo 171-0051, JAPAN  
TEL.+81(0)3 5926 1226  
int@carmate.co.jp